

DENVER DPF-517 User Manual

Digital Photo Frame



WARNING

The power adapter cable/disconnect device shall remain easy to operate/disconnect.

Introduction

Congratulations on your purchase of Digital Photo Frame.

Before operating the unit, please read this manual thoroughly and keep it for future reference. This manual will help you use many of the exciting features to make your Digital Photo Frame view more enjoyable.

The Digital Photo Frame enables you to view digital pictures directly from your camera's memory card. You can also create a slide show with multiple transition effects. No computer, digital camera, or internet connection is required.

- Play back of photo files stored in data stored devices through USB 2.0 port or various card-reader port, or internal memory.
- Supports SD, MMC, MS card.
- Compatible with most digital cameras stored JPEG images files.

- Automatic slide show with multiple transition effects and adjustable display time.
- Insert the memory card with slots facing you. Do not force the memory card in the slot.
- If you are not able to easily insert the memory card completely, you may have inserted it in a wrong way.

Note: DPF = Digital Photo Frame.

Precautions and Maintenance

 
- For indoor use only
- To avoid risks of fire or electric shock; do not expose this appliance to moisture.
- To avoid overheating; do not block the ventilation holes on the back of the DPF at any time.
- Keep your Digital Photo Frame out of sunlight. Direct sunlight may cause damage.
- Do not dismantle the DPF. There is a risk of electric shock, and there are no user serviceable parts inside. Dismantling your Digital Photo Frame will void your

warranty.


- Do not use the Digital Photo Frame if conditions could allow condensation to occur, or damage may result.

DPF Side view

- DC: Input the DC power adapter to the DPF player.
- SD/MMC/ MS card: The socket for DPF player to connect the SD/MMC/MS card .
- USB Host: The socket for DPF player to the USB memory.

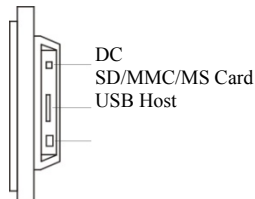

Player Overview

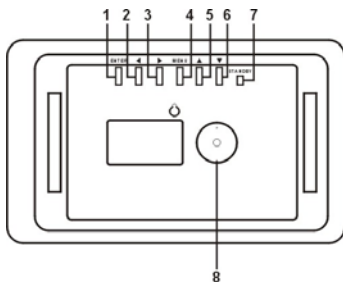 


Key control and Key function:

1. **ENTER Button:** Confirms your selection, and pause or play.
2. **LEFT SHIFT Button (◀):** Left cursor select function and to view the next photo.
3. **RIGHT SHIFT Button (▶):** Right cursor select function and to view the previous photo.
4. **MENU Button:** Displays the photo frames menu options.

5. **UP Button** (▲): Up cursor select function or rotate photo clockwise.
6. **DOWN Button** (▼): Down cursor select function or rotate photo clockwise.
7. **STANDBY Button**: Press this button two seconds to ON and OFF, Press one time to come back to the previous menu.
8. **Bracket jack**.

Assemble the Digital Photo Frame bracket to prop the unit up. Insert adapter DC plug into the DPF player first, then plug the power cord to a standard wall outlet.

 If you insert your memory card or USB flash drive into the frame, the images stored on the memory card or USB flash drive will begin to appear automatically on your screen.

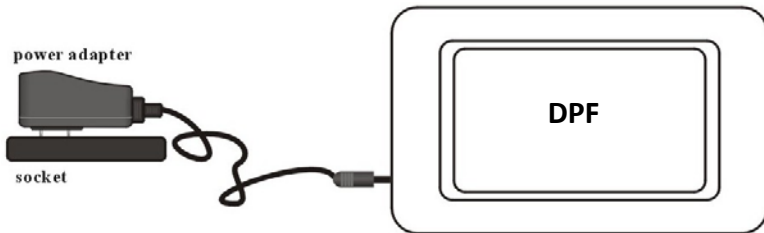

Instructions

DPF

ELECT CARD

... the slide show model, Press Standby button three times to show device select menu. Press arrow buttons to select Card, U Disc or inside memory, Press Enter

button confirm (Fig1).



Fig1



Fig2

●MAIN FUNCTIONS

After selected device, you can press arrow buttons to select the main functions, such as **Slide Show**, **Photo** and **Calendar** (Fig2), Press Enter button into the selected function mode.

1. Slide Show: This function menu allows you press Enter button to enter slide

show mode, the player will auto show photo.

2. Photo: This function allows you to preview photos in single window or six windows.

3. Calendar: This function shows calendar and clock to user.

●PHOTO FUNCTION

In this function mode (Fig 3).

1. Press arrow buttons to select photos preview in six windows.
2. Press Enter button to display pictures.
3. Press Menu button to show Setup menu in the pause situation of slide show.
4. Press Standby button to exit to the main function mode.



Fig3

●CALENDAR FUNCTION

In this function mode, the player shows calendar and clock to user (Fig 4).

1. Use the arrow buttons; you can look up the calendar show on the left of DPF.
2. You can also slide show photo in a small window if the selected card has jpg files.
3. Use Standby button to exit calendar show.



Fig4

Setup your DPF

Press Menu button to enter into setup menu. In the Setup menu, you can use the arrow buttons to select one item to setup or operate. When the item is show in gray color, you cannot deal with it at that moment (Fig 5).

1. **Image Size:** Setup display mode for slide



show. Include Auto Fit, Optimal and Panel Scan three modes.

2. Slide Show Effect: Special effects shown to transition one photo to the next in a slide show.

3. Slide Show Interval: The time amount the next photo is displayed.

4. Split Slide Show: The picture number of the display model under the Split Slide Show is one or four.

5. Start Slide Show: Starts the slide show.

6. Rotate: Rotate the displayed photo 90 counter-clock-wise (In the pause situation of slide show).

7. Zoom: Zoom in the displayed photo. When in zoom state, you can just do zoom or exit operation (In the pause situation of slide show).

8. Save Picture: Copy selected files or current file from a memory card to built-in memory (In the pause situation of slide show).

9. Delete File: Delete selected files or current file (In the situation of six windows).

10. Reset Setting: Reset all settings to factory default values.

11. Language: Change the language for the player.

12. Brightness, Contrast, Color and Tint: Adjust the Brightness, Contrast, Color and Tint value for screen.

13. Time: Set the internal clock and date.

Specification

Resolution	480*3(RGB)*234
Power adapter	Input 100-240V AC, Output DC5V 1A
Working Temperature	-10 to +50°C
File Format	JPEG
Cards supported	SD/MMC/MS/USB
Accessories	Power adapter, User's manual, Bracket



Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

ALL RIGHTS RESERVED

COPY RIGHT DENVER ELECTRONICS A/S



www.denver-electronics.com